


## Quick Setup Guide for 1,2, or 4 buttons


 

### Opening the cover

- A special key is provided to open the cover.
- If you tilt the door phone, you will see a small hole on the left hand side of the speaker grill.
- (1) Insert the key at 45degrees into the hole and when you push the key in, you feel it to be spring loaded.
- (2) Whilst holding down the key, push down and upwards on the white Perspex, as if sliding the Perspex under the speaker. (3) You will notice the Perspex pop out at the bottom.

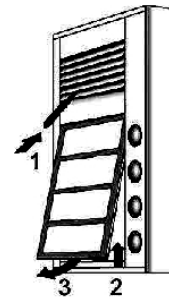

### Wiring

- Slide the Speaker grill down and you will see the connector block on the left.
  - Feed the cable (analogue line, power supply, lock – see figure - 6) through the cable hole.
  - Fix the door phone to the wall using the template, screws and rawlplugs supplied.
  - The unit is powered from the phone line (PSTN or PBX extension)
  - In order for backlight, heating of the circuit board (to avoid condensation) and to power a lock, a 12VDC 1A power supply is required. Refer to manual.
  - There are two options to control external devices e.g. Lock, Light, Bell. Either NO (Normally Open) or NC (Normally Closed) Refer to wiring diagram below.
  - To enable the heating of the board, ensure switch 1 is ON. Switch 2 is to reset the service password. Refer to manual. 12VDC is required to heat board.
- In order for the relay to operate, it requires 12V supply as per diagram.

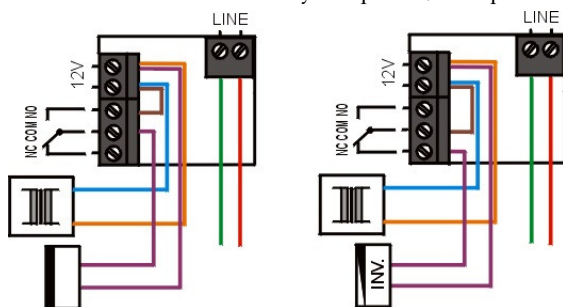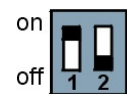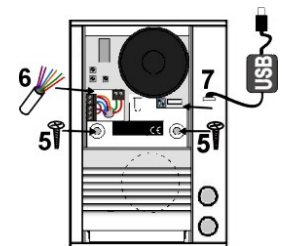

### Programming the Door Phone by DTMF

- In order to program the DoorPhone, simply just call the number that the door phone is attached to. E.g. PBX Extension or PSTN number.
- The DoorPhone will answer the call and you must enter # and the service password within 10 seconds.  
**Default Password: 0000 e.g. #0000** The unit will always revert to service programming after 5 seconds of inactivity.
- Programming the buttons on the door phone to dial a number.

- To program the buttons, enter service mode and dial **1 b xxxxxxxx** Where **b** is the button number, e.g. 1,2,3,4. xxxxxxxx is the PSTN number or PBX extension you want the button to call when pressed.  
E.g. 1 1 021716427
- **For more advanced options, please refer to the manual.**

### **Customer at front door (Door Phone)**

When a customer comes to the front door, he presses one of the buttons, the unit then dials via your PBX or PSTN line to the predefined staff number. The staff member answering the call, can talk to the customer at the front door and to let the staff member in the front door, the staff member presses 55 on his handset to open the door.

Template

